

 
# KALEIDO

RGB Lighting  
Combo



QuickGuide Installation

# DEFAULT FUNCTIONS & ELEMENTS

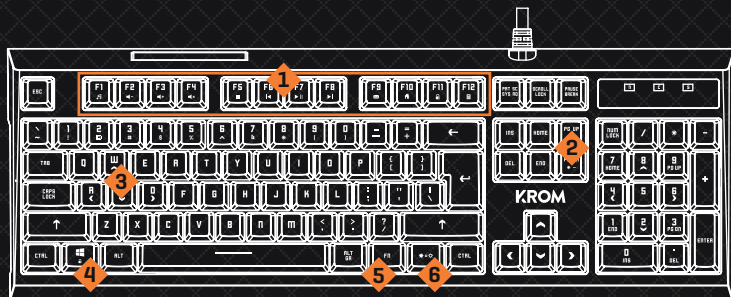

1) Multimedia functions

2) Lighting brightness controls

3) WASD / Arrows


4) Windows key lock

5) Function key

6) Lighting control

## DEFAULT FUNCTIONS & ELEMENTS

 - 1] Left button
- 2] Right button
- 3] Scroll wheel
- 4] DPI switch
- 5] Forward button
- 6] Backward button
- 7] LED logo

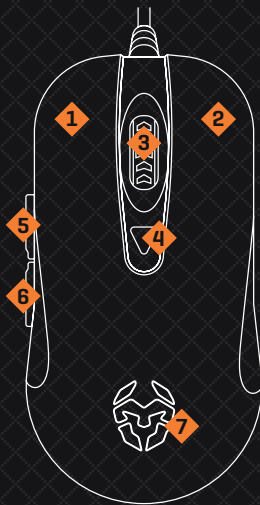

### DPI Settings

 
 
 
Adjust the mouse sensitivity by pressing the DPI switch. By observing the color shown on the LED logo you'll be able to know the set value.

500 DPI - Sky blue  
1000 DPI - Red  
2000 DPI - Blue

3000 DPI - Green  
4000 DPI - Orange

# KEYBOARD FUNCTIONS

## 1) Lighting controls

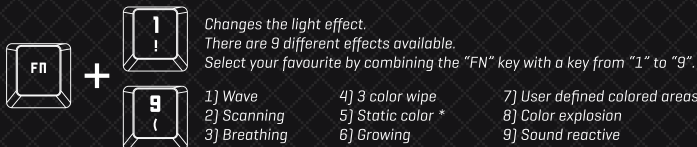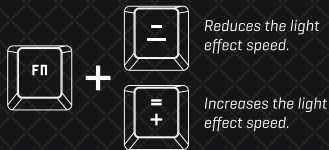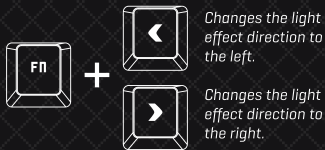

\* Press again "FN" + "5" keys to change colors.

\*\* Check the next page on how to define colored areas.



Setting user defined colored areas.

Press "FN" + "7" keys twice in 2 seconds, backlight will flash twice in white indicating that you have entered user defined mode.

Press "FN" + "ArrowLeft" or "ArrowRight" to choose one of the 6 areas to be customized.

Press "FN" + "ArrowUp" or "ArrowDown" to choose the color for the selected area.

## 2) Multimedia functions

Press the "FN" key along with the desired multimedia function.



Default music app



Mute



Play / pause media track



Default Internet browser



Reduces sound volume



Stop media track



Next media track



Keyboard lock



Increases sound volume



Previous media track



Default e-mail app



Calculator

## 3) Other functions



Swaps WASD keys with the arrow keys.  
Press again to revert.



Locks the Windows key.  
Press again to unlock.

# EU DIRECTIVES

## STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Krom declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EC; 2011/65/EC, as applicable. The technical documentation required by the Conformity Evaluation process is in Krom's possession and can be requested through the email [info@kromgaming.com](mailto:info@kromgaming.com).



## DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional information regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

# WARRANTY

## Who does the warranty protect:

This warranty is valid for the original purchaser only.

## What does the warranty protect:

For warranty claims, please contact Krom's overseas distribution partners in your country. Find the distribution partner list at [www.kromgaming.com](http://www.kromgaming.com)

**Warranty:** 2 years from the purchasing date. [Depending on the laws of each country]

**URL:** [www.kromgaming.com](http://www.kromgaming.com)

**E-mail:** [support@kromgaming.com](mailto:support@kromgaming.com)

## What doesn't the warranty cover:

1. Any product, on which the serial number has been defaced, modified or removed.
2. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
3. Repair or attempted repair by anyone not authorized by Krom.
4. Damage to or loss of any programs, data or removable storage media.
5. Software or data loss occurring during repair or replacement.
6. Any damage of the product due to shipment.
7. Removal or installation of the product.
8. External causes, such as electric power fluctuations or failure.
9. Use of supplies or parts not meeting Krom's specifications.
10. Normal wear and tear.
11. Any other cause which does not relate to a product defect.

If you have any questions regarding technical problems, please contact us via our website:

[WWW.KROMGAMING.COM](http://WWW.KROMGAMING.COM)

Krom reserves the right for any modifications in text and/or images.



**KROM**

[www.kromgaming.com](http://www.kromgaming.com)